



COMPETITION MODE



PRESS "FN" & "ESC" TO TURN $\underline{\text{ON}}$ COMPETITION MODE. PRESS AGAIN TO TURN IT OFF.

CERTAIN KEYS SUCH AS THE WINDOWS KEY WILL NOT WORK IN COMPETITION MODE. YOU CAN CUSTOMISE THIS IN FNATIC OP.



FUNCTION KEY LOCK



PRESS "FN" & "END" TO TURN $\underline{\text{ON}}$ FN LOCK. PRESS AGAIN TO TURN IT OFF.

LOCKING THE FN LAYERS MAKES IT SO YOU DO NOT HAVE TO HOLD THE FN KEY TO EXECUTE ANY SECONDARY KEY FUNCTION.

EXAMPLE: WITH FN LOCK ON, PRESSING F12 WILL MUTE/UNMUTE AUDIO. WITH FN LOCK OFF, YOU WOULD NEED TO PRESS FN + F12.



LED BRIGHTNESS ADJUSTMENT



PRESS "FN" & "UP" KEY TO RAISE THE BRIGHTNESS

 
PRESS "FN" & "DOWN" KEY TO LOWER THE BRIGHTNESS

 



CYCLING LIGHTING EFFECTS









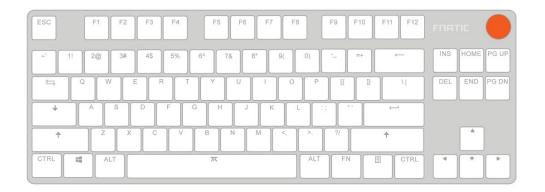

VOLUME ADJUSTMENT




TURN THE VOLUME WHEEL
COUNTER-CLOCKWISE TO DECREASE VOLUME



TURN THE VOLUME WHEEL CLOCKWISE TO INCREASE VOLUME



PRESS THE VOLUME WHEEL IN TO MUTE.
PRESS AGAIN TO UNMUTE.

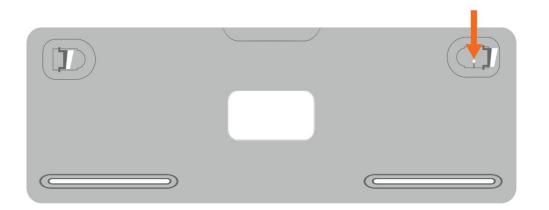

FACTORY RESET



USE A PIN TO PRESS AND HOLD THE BUTTON IN THE SMALL HOLE FOR 10 SECONDS.



AFTER 10 SECONDS YOU CAN RELEASE THE BUTTONS. ALL KEYS WILL FLASH AFTER A SUCCESSFUL RESET.